




INSTALLATION DATA


ANS Z21.20

AUTO IGNITION SYSTEMS


NOTE: Install Snap-Fit™ Universal Thermocouple so the pilot burner flame envelopes top 3/8" to 1/2" of the tip.

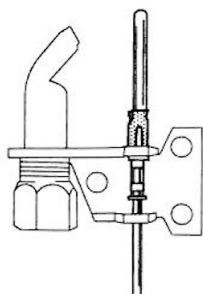


**SLIM
THERMOCOUPLE**
Install in a clip-type
bracket (requires no
sheath).

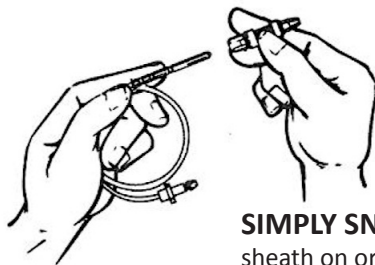

SIMPLY SNAP the
sheath on or off,
as the application
requires.

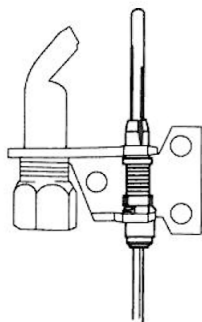

**STANDARD
THERMOCOUPLE**
Install in a clip or
screw-type bracket.
Includes large clip and
a thread pilot adaptor.
Illustration shows
sheath snapped into
position. (The clip will
hold the thermocouple
firmly into position in
either clip or screw-
type bracket.)

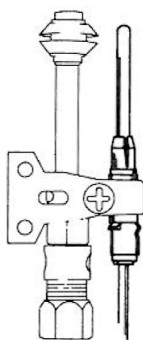

**STANDARD
THERMOCOUPLE**
Installed in a
clamp-type bracket.
Illustration shows
sheath snapped in to
position.



191 E. North Avenue
Carol Stream Illinois 60188 USA
Customer Service
Telephone 1.800.304.6563
Facsimile 1.800.426.0804
HVACCustomerService@robertshaw.com

For Technical Service
Telephone 1.800.445.8299
Facsimile 1.630.260.7294
TechnicalService@robertshaw.com

Robertshaw®, Ranco®, Paragon®
and Uni-Line® are trademarks of
Robertshaw its subsidiaries and/or
affiliated companies. All other brands
mentioned may be the trademarks of
their respective owners.

www.uni-line.com
www.robertshaw.com
©2014 Robertshaw
07/14 -1-950 RevB